# Universal Footring No. CK52

**PART LIST**

| KEY | QTY | DESCRIPTION |
|---|---|---|
| 1 | 2 | Footring Connect. Knob |
| 2 | 1 | Base (Supplied with chair) |
| 3 | 2 | Footring Sections |
| 4 | 1 | Gas Cylinder (Supplied with chair) |

**NOTE:**
Part #'s 2 and 4 were included with your chair. They are not included with the CK52 Kit.

**PREVENTIVE MAINTENANCE AND WARNING!**

- USE THIS PRODUCT ONLY FOR SEATING ONE PERSON AT A TIME.
- DO NOT USE THIS CHAIR AS A STEP STOOL / LADDER.
- DO NOT SIT ON ANY PART OF THE CHAIR EXCEPT THE SEAT.
- DO NOT USE CHAIR ON UNEVEN FLOOR SURFACES.
- DO NOT USE CHAIR UNLESS ALL BOLTS , SCREWS AND KNOBS ARE TIGHT . AT LEAST EVERY SIX MONTHS , CHECK ALL BOLTS , SCREWS AND KNOBS TO BE SURE THEY ARE TIGHT.
- IF ANY PARTS ARE MISSING , BROKEN , DAMAGED OR WORN , STOP USE OF THE PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORIZED PARTS.
- DISPOSE OF PACKAGING PROPERLY . PLASTIC BAG IS NOT A TOY . DO NOT USE PLASTIC BAG AS HEAD COVERING - IT MAY CAUSE SUFFOCATION.
- FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.

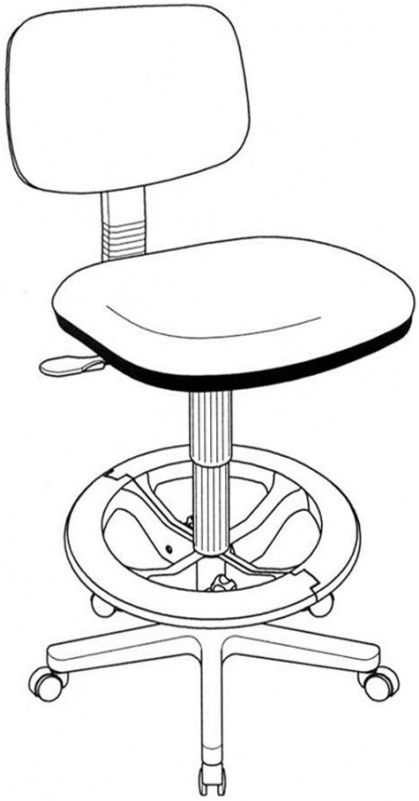

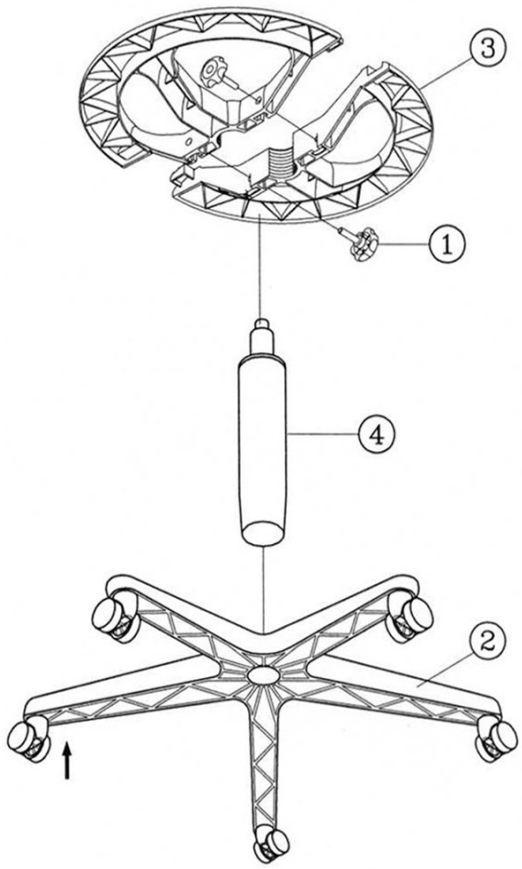


Made in Taiwan

**ASSEMBLY INSTRUCTIONS**

1. The Universal Footring is typically attached after the chair has been fully assembled
2. Place one Footring Section on either side of the center chair post/gas cylinder and align holes
3. Attach Footring Sections to one another using the 2 Connection Knobs
4. Adjust Footring to desired height and tighten Connection Knobs securely

**CAUTION -** The Footring is intended as a footrest only. It is not designed to be stood upon