



# Footglide Repair Kit For Blueprint Racks

For models BPR026  
BPR059-12  
BPR059-18

## Parts Included:

4 pcs. Replacement Footglides



4 pcs. ½" Hex Bolts

*Footglides are used for non-mobile applications where wheels are not desired. Their use is optional.*

**1** Remove thumbscrew adjustment knobs that came with rack and replace with Hex Bolts, as shown in the figures below. BPR059 requires four Hex Bolts. BPR026 requires only two.

**2** Insert Replacement Footglides in corresponding holes in bottom of rack. Be sure they are pushed in all the way.

### BPR026

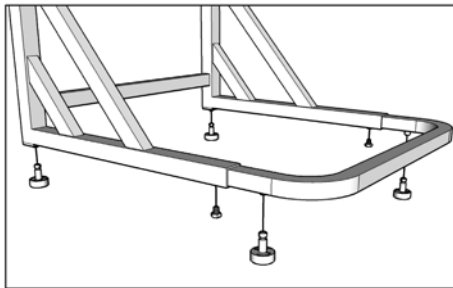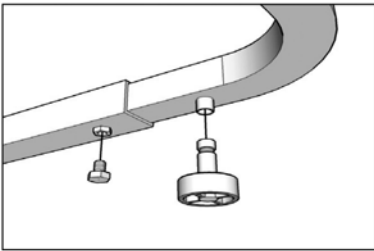

### BPR059

